

# ASSEMBLY INSTRUCTIONS

# CONTENT

















# MOUNTING THE INCLINATION ADAPTER



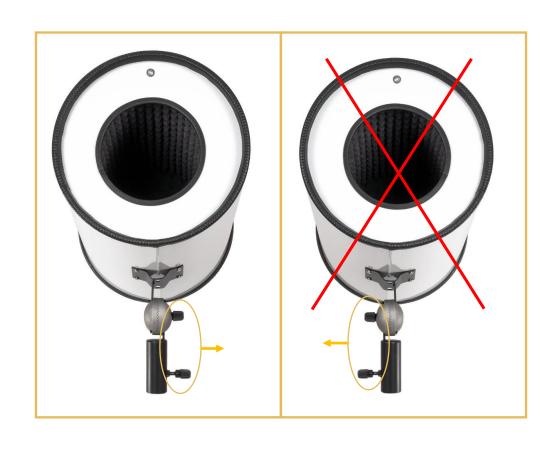



# MOUNTING THE INCLINATION ADAPTER

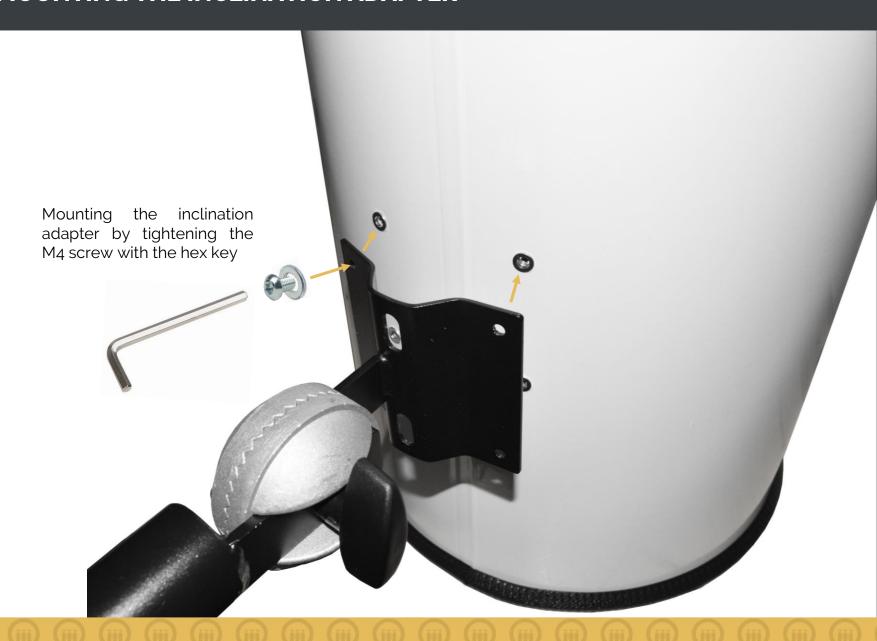



# **MOUNTING THE STAND**





# MOUNTING THE TUBE





# **MOUNTING THE MUSIC HOLDER**





Mounting the music holder by tightening the M10 screw with the hex key





# **ADJUSTABLE HEIGHT**







Danger of injury when adjusting under load: Please remove the Mute Tube before adjusting the height of the stand.



### **ADJUSTABLE ANGLE**







Danger of tipping and injury when adjusting the angle under load: Please remove the Mute Tube before adjusting the angle of the adapter.

### **SAFETY NOTES**



### Danger for children

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke! Never let children play unattended with the product.

### Danger of tipping when transported under load

If the stand is moved without having removed the installed device/tube. The stand may tip over and cause injuries and property damage Remove the installed device/tube before transporting the stand.

### Danger of tipping on unsuitable surfaces

When the stand is installed on soft or uneven ground, The stand with the mute tube may tip over and cause injuries and property damage Install the stand only on even and solid surfaces.

### Possible staining

The plasticizer contained in the rubber feet of this product may possibly react with the coating your parquet, linoleum, laminate of PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.